convatec
— forever caring —

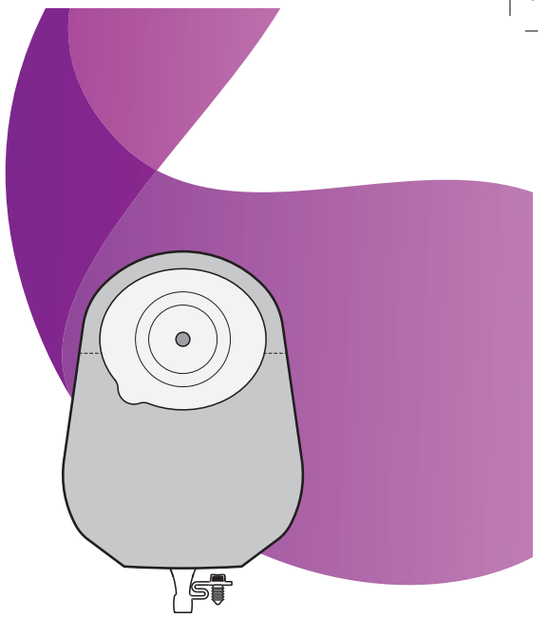

Application card

EsteemBody™

One-piece soft convex urostomy pouch

Before application, ensure your hands and the skin surrounding the stoma are clean, dry and free from oily substances.

Preparation and application

1



Place the stoma measuring guide over your stoma to confirm the correct size.

2



If using a pre-cut skin barrier, select a skin barrier with a pre-cut stoma opening slightly larger than your stoma.

3

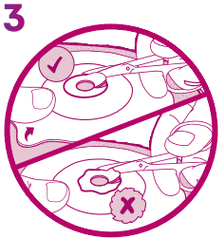

If using a cut-to-fit skin barrier, transfer the size to your skin barrier and cut accordingly.

4

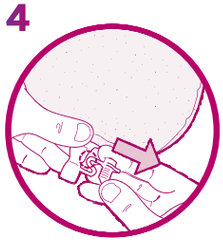

Partially inflate the pouch by blowing and separate the pouch films to allow air to enter.

5

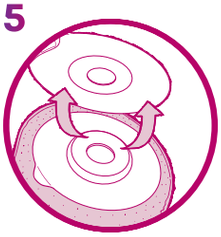

Remove skin barrier release liner.

6



Hold the skin barrier below your stoma and apply upwards against the skin around your stoma. Press the skin barrier against the skin.

7

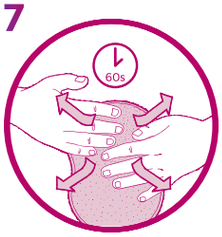

Smooth onto your skin. Maintain slight pressure on the skin barrier for 60 seconds to ensure a good seal. Gently insert the plug.

Emptying

1

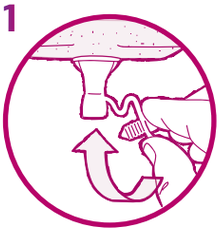

Start by tilting the tap up and towards you. Squeeze the base of the tap and open the tap with the other hand.

2

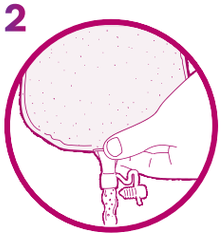

Direct the tap into the toilet to drain the urine.

3



Support the pouch with one hand, and wipe the outside of the valve or tap with clean tissue in the other hand.

4

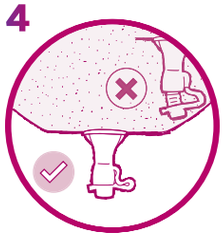

Gently insert the plug into the tap and make sure it is securely closed.

Removal and disposal

1



Gently lift the top edge of the barrier, then slowly and gently peel downward.

2



Dispose of the pouch according to local disposal regulations.

Scan to watch application video
(which includes night drainage instructions)

Learn more at convatec.com or contact us at 1-800-422-8811 or cic@convatec.com

See package insert for complete instructions for use.

©2023 Convatec Inc. ®/™ all the trademarks are the property of Convatec group companies. AP-64826-GBL-ENG

convatec
— forever caring —